

WALL 7

LVH44 FACE-FIXED ONTO RIGID WALL WITH ANGLE FIXINGS

DESCRIPTION

- 1 Rigid wall construction
 - 2 Lorient intumescent sealant between air transfer grille and masonry wall
 - 3 Lorient LVH44 intumescent air transfer grille to one side only (either side of the wall is acceptable)
 - 4 **Fixing angle:** 40 x 40 x 1mm thick minimum galvanised steel angles fixed to LVH44 unit with self tapping screws and to wall with masonry anchors
- Fixing option 1:** 20mm wide angles, central to all four sides or at 200mm maximum centres
- Fixing option 2:** Full width angles top and bottom only with 200mm fixing centres.


CONTENTS

- LVH44 air transfer grille
- Cover grille (optional)

TOOLS REQUIRED

- Steel angles
- Self tapping screws (3.5 x 16mm)
- Masonry anchors
- Lorient intumescent sealant

Note: Maximum size for surface method 600mm x 600mm

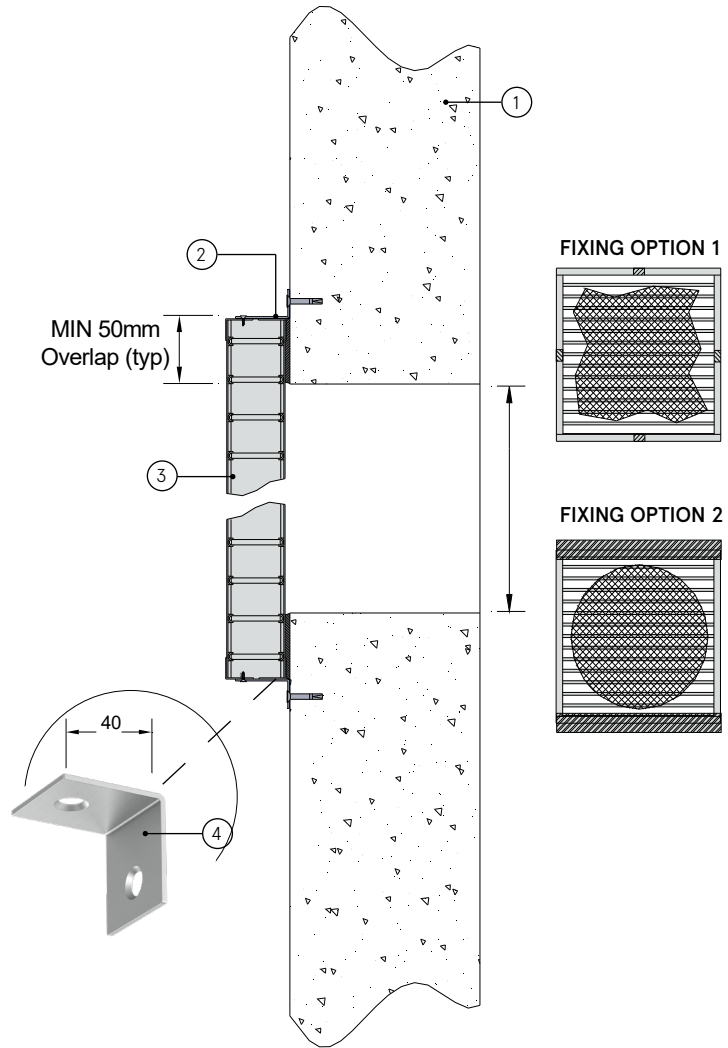

LVH44 for rigid wall face fixed and angle fixings

FR120

Fire Resistance in accordance with

BS 476-22:1987

Approval Ref

WFRC 121316 (AW7)

Max size for surface mounted method

600mm x 600mm

LVH44 air transfer grilles are supplied 2mm less than the nominal size e.g. a 300mm x 300mm is actually 298mm x 298mm.

INSTALLATION INSTRUCTIONS

- ▶ Measure penetration ensuring air transfer grille provides 50mm of overlap.
- ▶ Fix the mounting angles onto the LVH44 air transfer grille using self tapping screws.
- ▶ Mount air transfer grille onto rigid wall opening.
- ▶ Fix the angles to the rigid wall with masonry anchors.
- ▶ Apply a bead of Lorient intumescent sealant around the perimeter of air transfer grille between the LVH44 and the wall.
- ▶ Connect ductwork (or cover grille) directly to wall using approved breakaway connections to ensure compliance.
- ▶ **Note:** Fixings supplied by others.